

boqballe

Spare parts list ST from machine No. 240

Lista de piezas de recambio

Liste de pièce de rechange

Reservedelsliste

Onderdelenlijst

Varaosaluettelo

Reservdelslista

Ersatzteilliste




boqballe

A. P. LAURSEN A/S . 7171 ULDUM
DANMARK . TELEFON 75 89 32 66
TELEFAX 75 89 37 66

1993-02-01

boqballe spare parts list

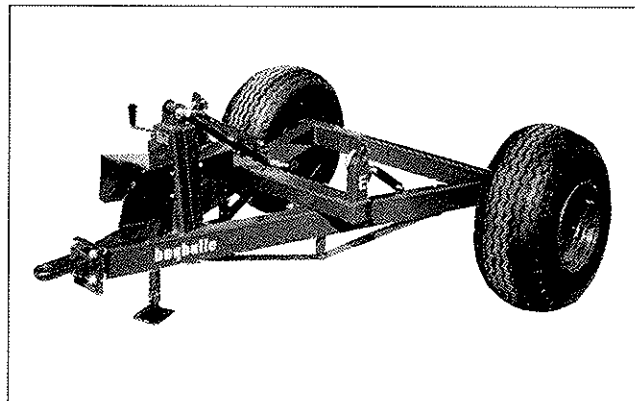


ST

bogballe

A. P. LAURSEN A/S · 7171 ULDUM
DANMARK
TLF.: 75 89 32 66 · FAX: 75 89 37 66

Type ST

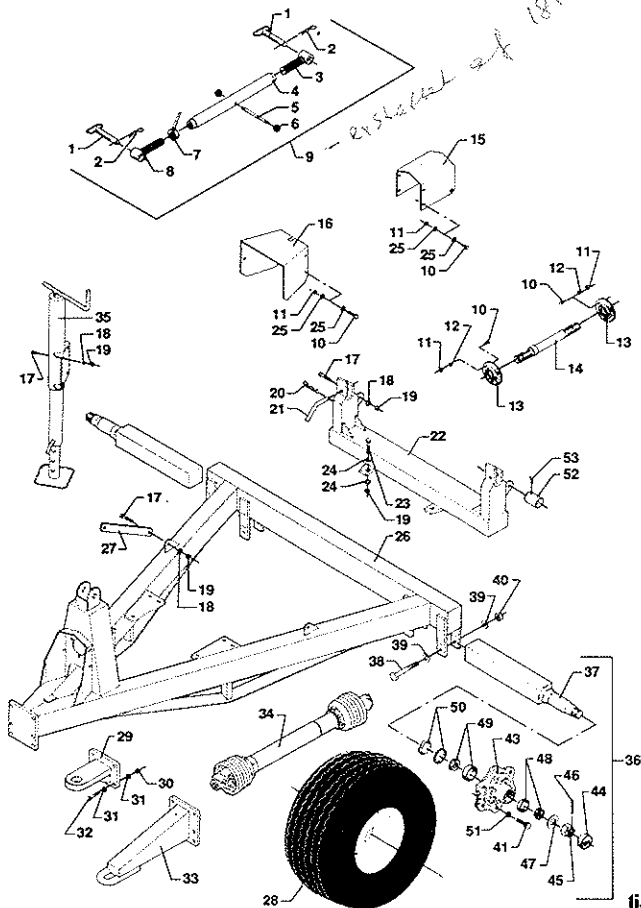

1811-55

Pos. No.	Order No.	Notes	Pos. No.	Order No.	Notes
1	6560-10		38	9967-50	M20 x 140
2	9934-30		39	9930-40	D21/37
3	9633-01	BL/D/DZ/EZ/EW/EZW	40	9969-94	M20
4	1811-61	CII	41	9984-28	M18 x 2,5 x 45
	1811-65		43	9984-21	6/161/205
4	1811-67	BS	44	9984-24	D63 mm
5	5630-02		45	9984-25	M30 x 1,5 DIN 937
6	9990-41		46	9984-26	ø5 x 50
7	5634-01		47	9984-27	D30/50 x 4
8	9632-01		48	9950-16	L68 - 149/110
9	1811-60	BL/D/DZ/EZ/EW/EZW	49	9950-15	LM 102 - 949/910
9	1811-64	CII	50	9984-23	
9	1811-69	BS	51	9984-29	C18,5 DIN 74361
10	9964-18	M8 x 20	52	1811-06	D28/50 x 37
11	9960-91	M8	53	9963-01	M10 x 25
12	9968-71	SS8			
13	9950-43	DB-PF 207			
14	1811-71				
15	1810-12				
16	1520-70				
17	9964-44	M12 x 30			
18	9968-35	SS12			
19	9968-16	M12			
20	9934-34				
21	9524-05				
22	1811-01	E/EZ/EW/EZW			
22	1811-10	BL/D/DZ			
22	1811-22	BS			
22	1811-40	CII			
23	9960-59	M12 x 40			
24	9930-35	D12/24			
25	9930-32	D8/17			
26	1810-19				
27	1810-13	BL/D/DZ			
27	1810-14	CII			
27	1810-16	E/EZ/EW/EZW			
27	1810-17	BS			
28	9980-18	11,5 x 15" AW			
28	9980-19	400 x 15,5" RIB Trailer			
28	9980-20	400 x 15,5 T404			
29	1811-51				
30	9928-96	M16			
31	9930-20	D17/30			
32	9960-91	M16 x 55			
33	1811-75				
34	9985-40	W2102 SD 05			
34	9985-41	WE2280 DS 15			
35	1550-30				
36	1810-03	6/161/205			
37	9984-49				